



UVC Camera Software Manual

Date	Version	Description
2023-10-19	V1.0	First Released



1 Description

- UVC cameras comply with UVC protocol and work with web-camera applications out-of-box
- UVC Cameras support windows, linux, MacOS Compatible with UVC drivers

1.1 What is UVC Camera

- UVC Camera is camera with a USB interface that meets the standards set for the USB Video Class. This means that every UVC Camera is a USB camera, but not all USB cameras are UVC Cameras, because they might adopt the USB interface without meeting the Video class requirements.
- Therefore, a major advantage of the UVC cameras is their universal compatibility and flexibility. As they meet the video class standard, you can easily use them on different platforms with a USB port without handling the driver issue, like the Raspberry Pi or a smartphone. It also makes it easier for you to migrate your applications from one platform to another.
- At present, our UVC cameras support Windows, Linux, MAC, and Android systems, but do not support the iPhone system.


2 Works on Windows

2.1 AMCAP

AMCAP is a free and easily use UVC Camera test tools.

2.1.1 Preview

Open AMCAP.EXE, Select USB Camera From “Devices”, Select “Preview” from “Options”

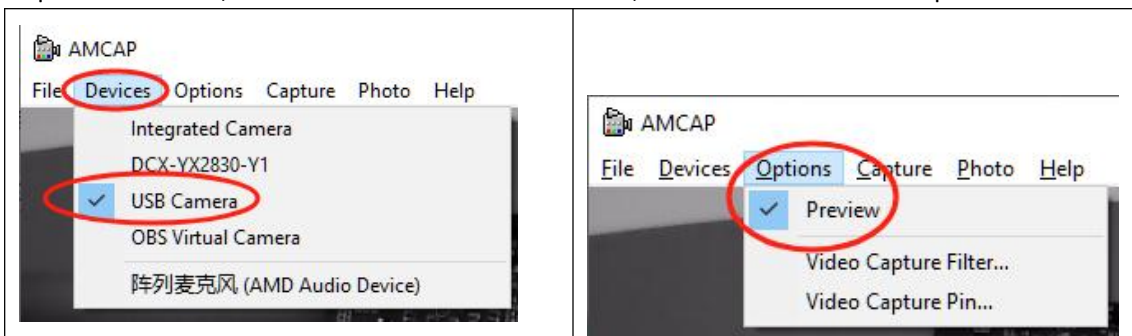



2.1.2 Video Capture Filter

You Can find most of Controllable Parameters from “Options”, “Video Capture Filter”.

The image shows two screenshots from the AMCAP software. The top screenshot shows the 'Options' menu with 'Video Capture Filter...' highlighted. The bottom screenshot shows the 'Properties' dialog box for 'Video Proc Amp' with the following parameters:


Parameter	Value	Auto
Brightness	0	<input type="checkbox"/>
Contrast	32	<input type="checkbox"/>
Hue	0	<input type="checkbox"/>
Saturation	0	<input type="checkbox"/>
Sharpness	3	<input type="checkbox"/>
Gamma	100	<input type="checkbox"/>
White Balance	4600	<input checked="" type="checkbox"/>
Backlight Comp	1	<input type="checkbox"/>
Gain	15	<input type="checkbox"/>
ColorEnable	<input type="checkbox"/>	
PowerLine Frequency (Anti Flicker)	50 Hz	

Brightness, Contrast, Hue, Saturation, Sharpness, Gamma, White Balance, Backlight Comp, Gain, Exposure, PowerLine Frequency, Low Light Compensation

2.1.3 External Trigger Parameters


From “Video Capture Filter” “Camera Control”, The “Focus” Parameter is for external trigger


signal Enable.

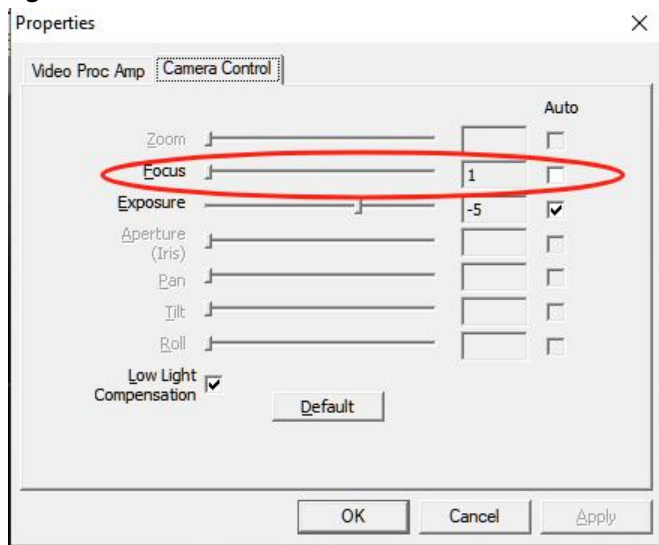

2.1.3 Video Capture Pin

You Can find most of Controllable Parameters from “Options”, “Video Capture Pin”.

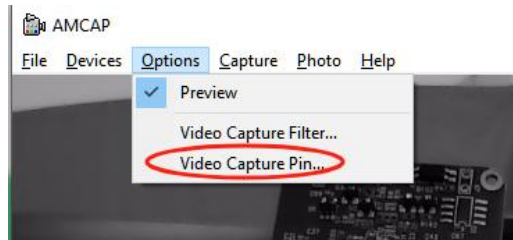

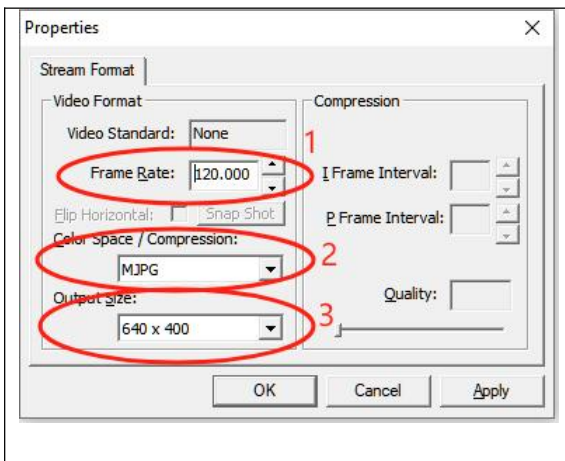	<table border="1"> <tr> <td data-bbox="826 1688 863 1756">1</td> <td data-bbox="863 1688 1362 1756">You can chage Frame rate</td> </tr> <tr> <td data-bbox="826 1778 863 1944">2</td> <td data-bbox="863 1778 1362 1944">Choose Output format like MJPG/YUV2</td> </tr> <tr> <td data-bbox="826 1966 863 2020">3</td> <td data-bbox="863 1966 1362 2020">Choose Resolution Camera</td> </tr> </table>	1	You can chage Frame rate	2	Choose Output format like MJPG/YUV2	3	Choose Resolution Camera
1	You can chage Frame rate						
2	Choose Output format like MJPG/YUV2						
3	Choose Resolution Camera						



2.1.4 Status Bar

You can find live frame Rate, Output Resolution




2.2 PotPlayer

Potplayer is another free Windows Tools which easily get video and images of UVC and U3V,UVC3.0 Cameras.

2.2.1 Open UVC Camera


Use Shortcut Key **ALT+D** open window as above

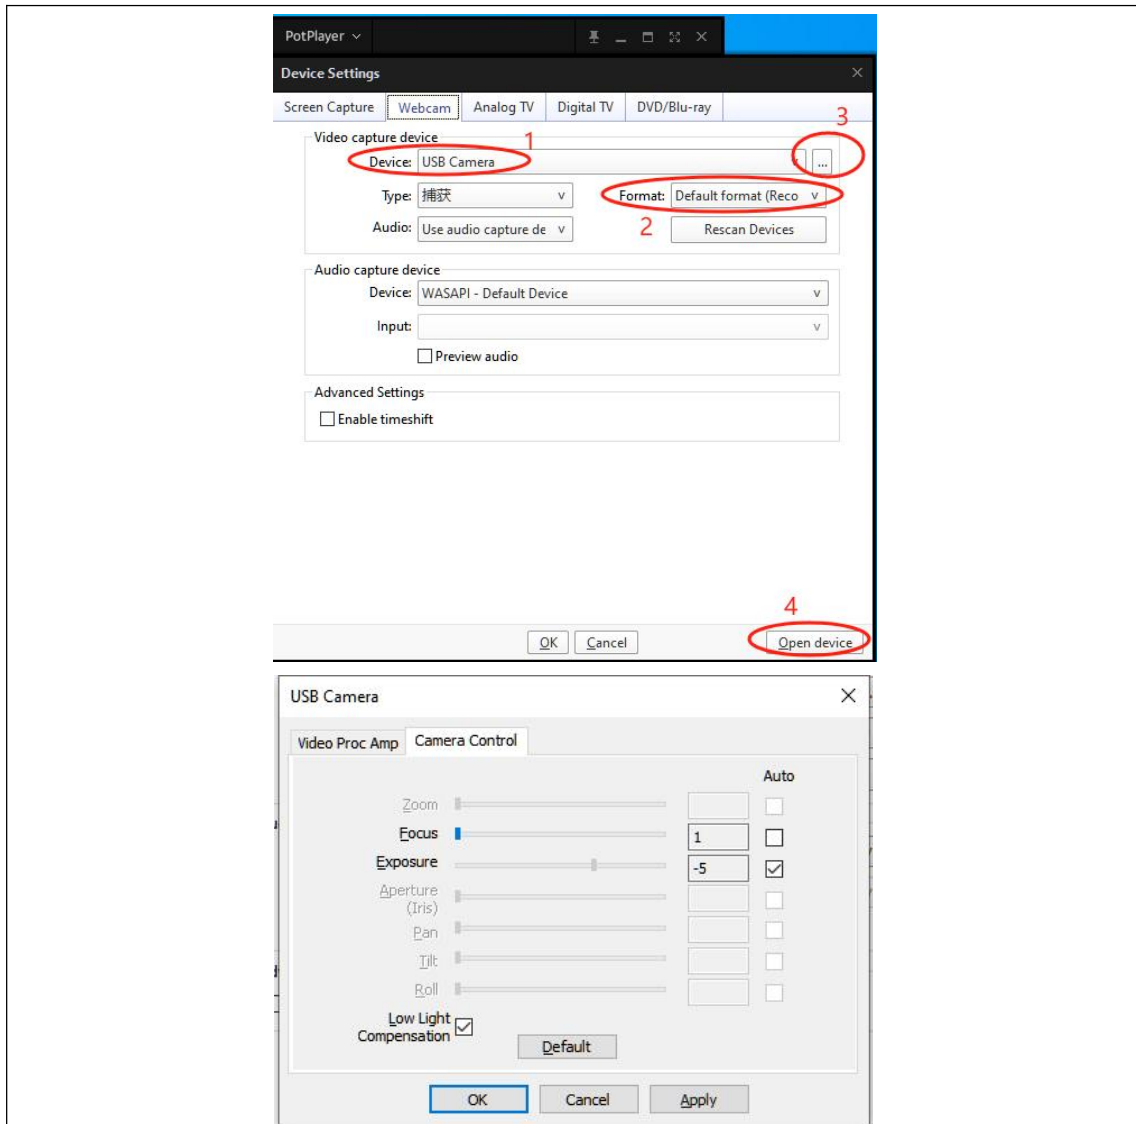

1	Choose UVC Camera Device
2	Choose Output format ,resolution,frame rate
3	Camera Parameters Settings
4	Open Device

2.2.2 Live Working Status

Use shortkey TAB Open window as below

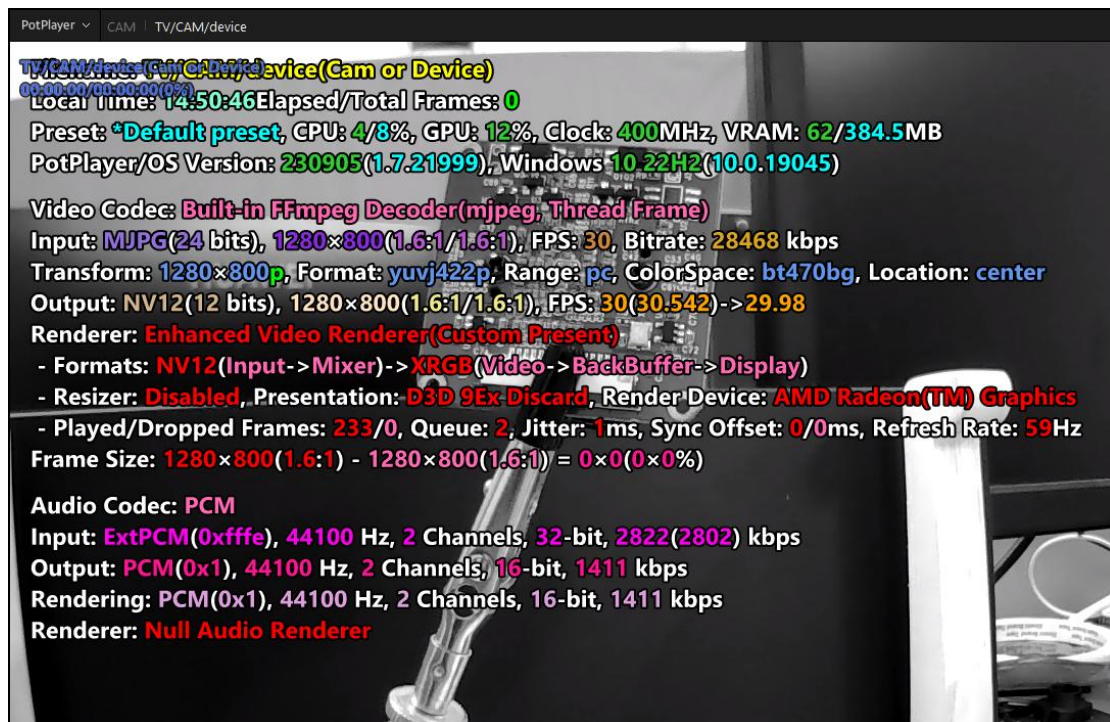

2.3 OpenCV Python

2.3.1 Install Python3

Download from below link,check from cmd.exe after install successfully

<https://www.python.org/downloads/release/>

```
python --version
```

```
pip --version
```

Support: support@inno-maker.com
Bulk Price: sales@inno-maker.com

Wiki: wiki.inno-maker.com
Github: <https://github.com/INNO-MAKER>



```
C:\Users\zhouj>python --version  
Python 3.11.6
```

```
C:\Users\zhouj>pip --version  
pip 23.3 from C:\Users\zhouj\AppData\Local\Packages\Python311\site-packages\pip (python 3.11)
```

2.3.2 Install numpy

```
pip install numpy
```

2.3.3 Install Opencv

```
pip install opencv-python
```

If you have error for installing, update your pip by below command:

```
python -m pip install --upgrade pip
```

2.3.4 Run OpenCV Python

Example1:

```
import cv2  
  
cv2.namedWindow("preview")  
vc = cv2.VideoCapture(0)  
  
if vc.isOpened(): # try to get the first frame  
    rval, frame = vc.read()  
else:  
    rval = False  
  
while rval:  
    cv2.imshow("preview", frame)
```




```
rval, frame = vc.read()
key = cv2.waitKey(20)
if key == 27: # exit on ESC
    break

vc.release()
cv2.destroyAllWindows("preview")
```

Example2:

```
# import the opencv library
import cv2

# define a video capture object
vid = cv2.VideoCapture(0)

while(True):

    # Capture the video frame
    # by frame
    ret, frame = vid.read()

    # Display the resulting frame
    cv2.imshow('frame', frame)

    # the 'q' button is set as the
    # quitting button you may use any
    # desired button of your choice
    if cv2.waitKey(1) & 0xFF == ord('q'):
        break

# After the loop release the cap object
vid.release()
# Destroy all the windows
cv2.destroyAllWindows()
```

2.3.5 Cited information

You can refer to the below link for any updates:

Support: support@inno-maker.com
Bulk Price: sales@inno-maker.com

Wiki: wiki.inno-maker.com
Github: <https://github.com/INNO-MAKER>



<https://stackoverflow.com/a/606154>

<https://www.geeksforgeeks.org/python-opencv-capture-video-from-camera/>

3 Works on Linux

3.1 Gvvcview


3.1.1 Install

Gvvcview is free and easy operation tools for linux, Install and run :

```
sudo apt install gvvcview
```


```
sudo gvvcview
```

3.1.2 Image Controls

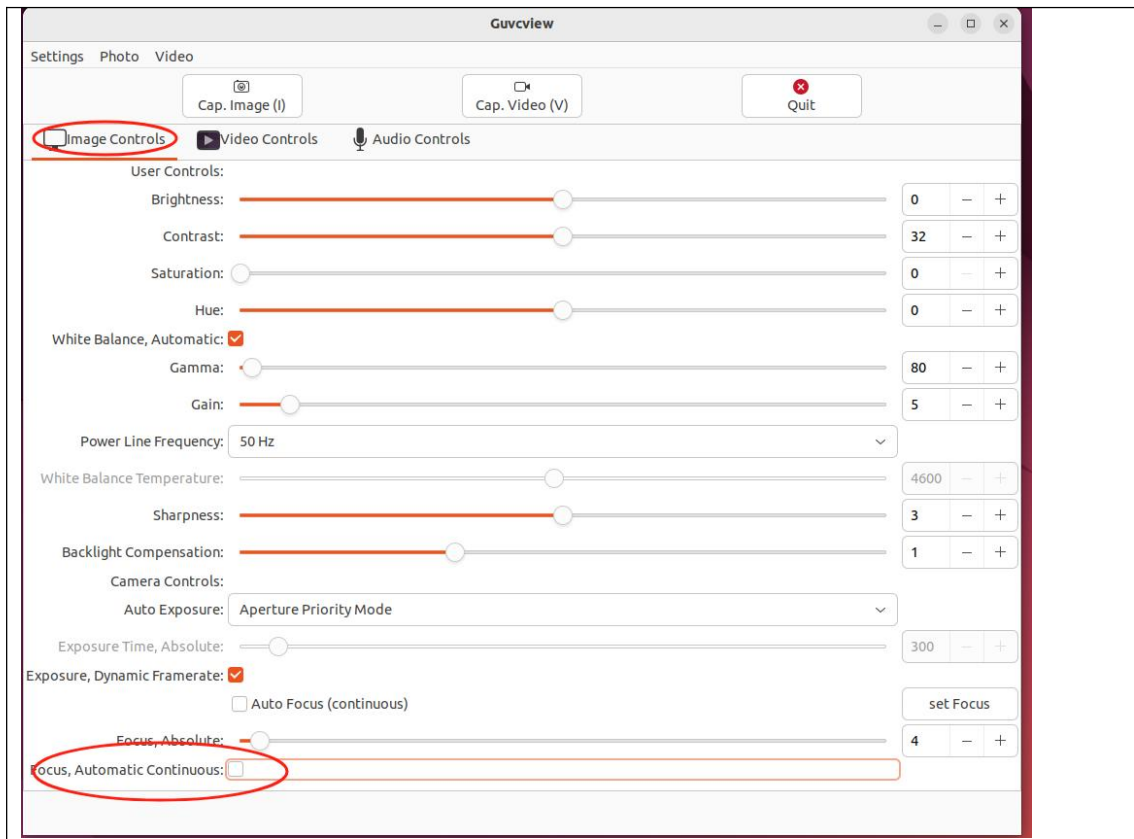


You can find the control parameters from Image Controls.

3.1.3 External Trigger Control

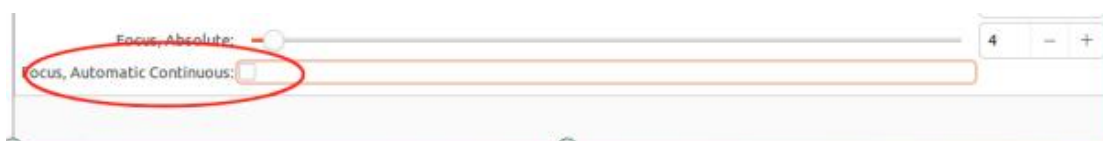

Focus, Automatic Continuous is for external trigger. Uncheck it to enable external trigger mode.

3.1.4 Video Controls

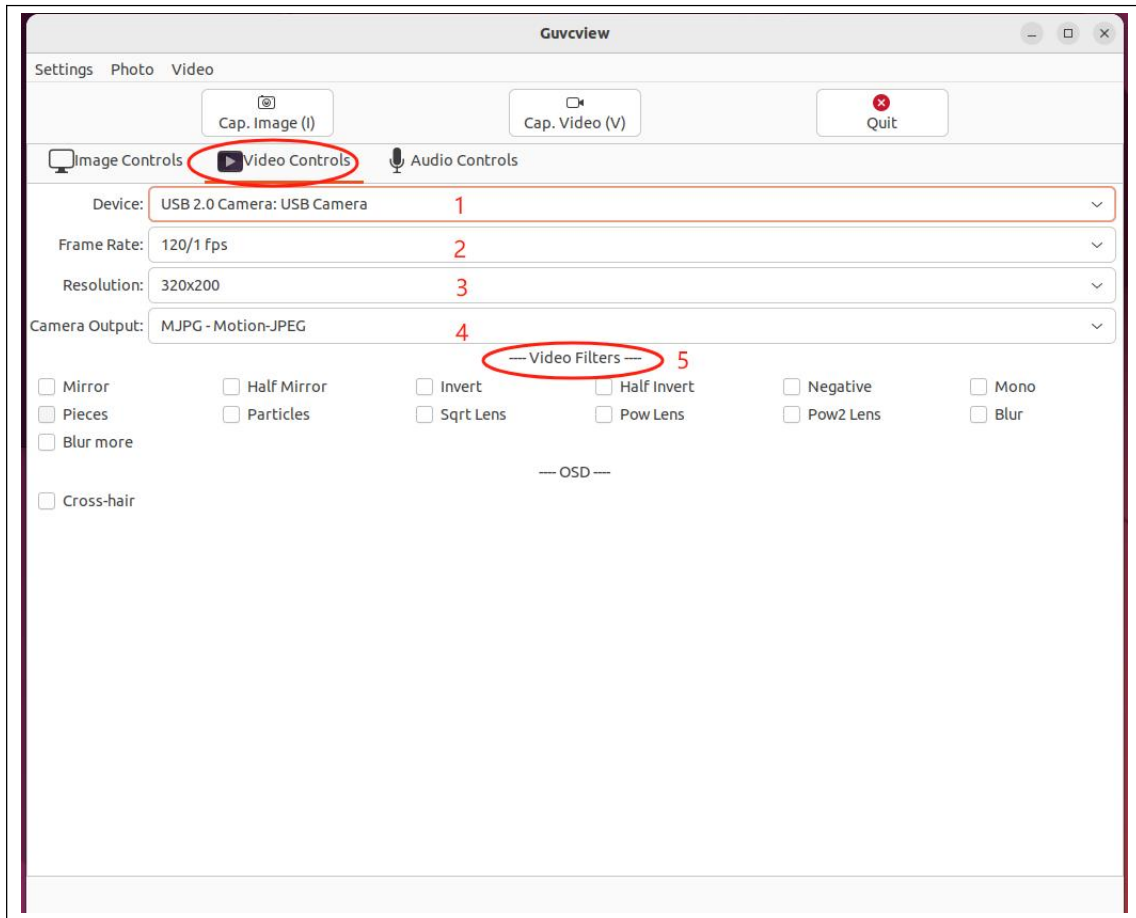

From Video Controls,

1	Select Device
2	Select Frame Rate
3	Select Resolution
4	Select Output format
5	Video Filters

3.2 qv4l2

3.2.1 Install

qv4l2 is free and easy operation tools for linux, Install and run :


```
sudo apt install qv4l2
```

```
sudo qv4l2
```




3.2.2 General Settings

Choose Output Devices, Resolution, Frame Rate

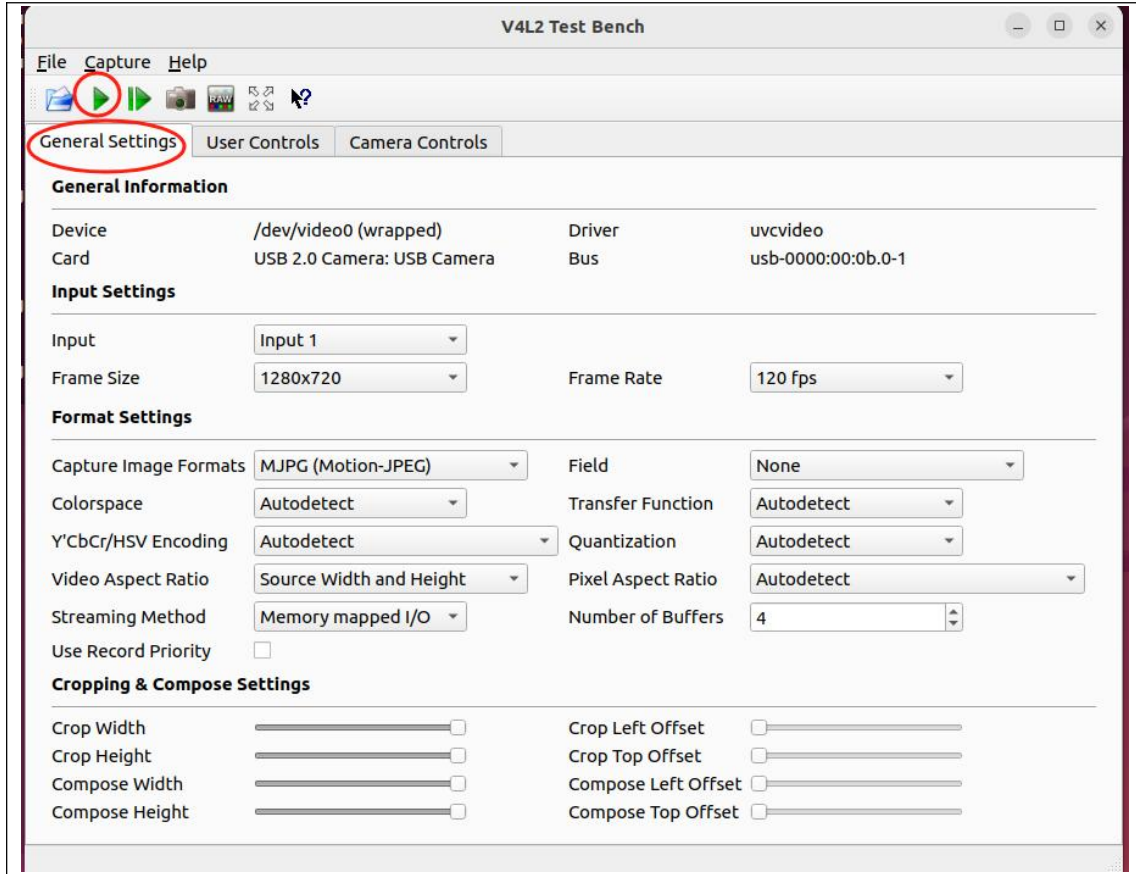


3.2.3 User Controls

control parameters

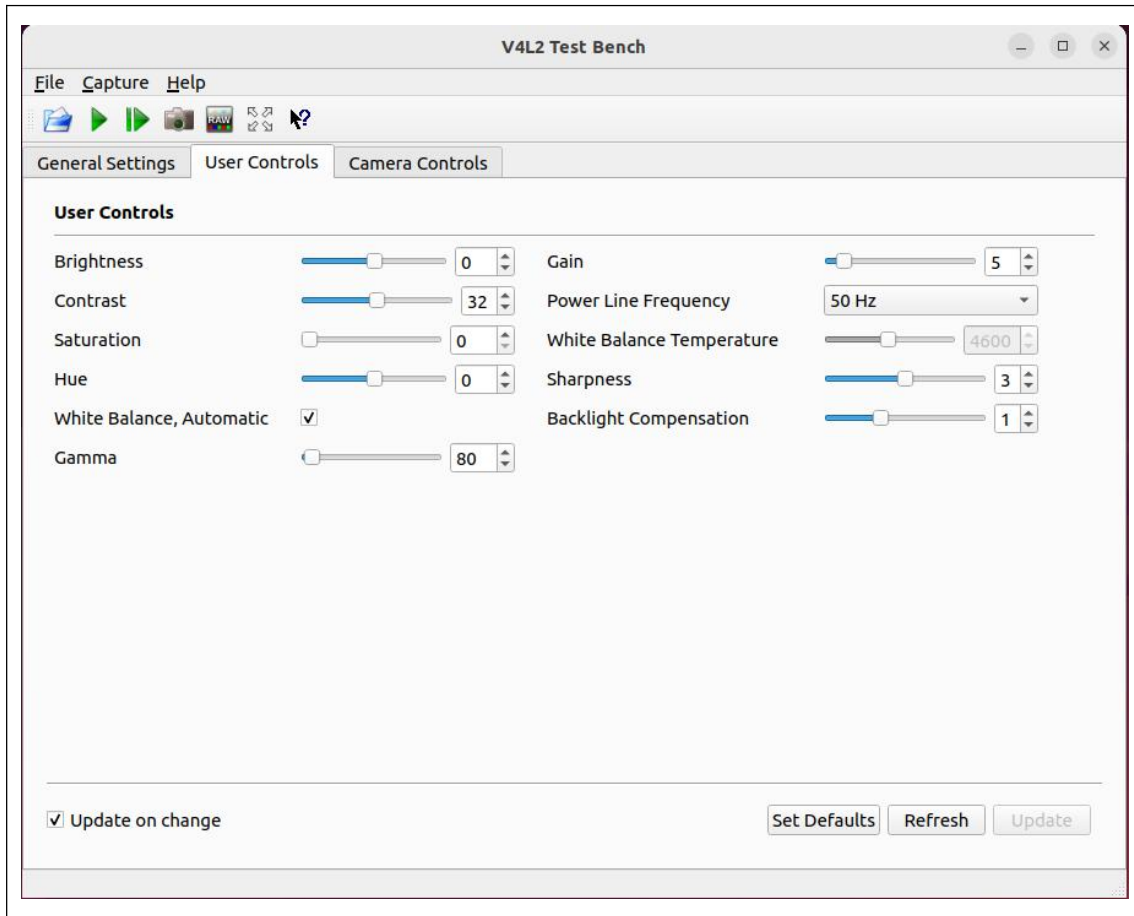

3.2.4 Camera Controls

You can uncheck the External Trigger from this options.

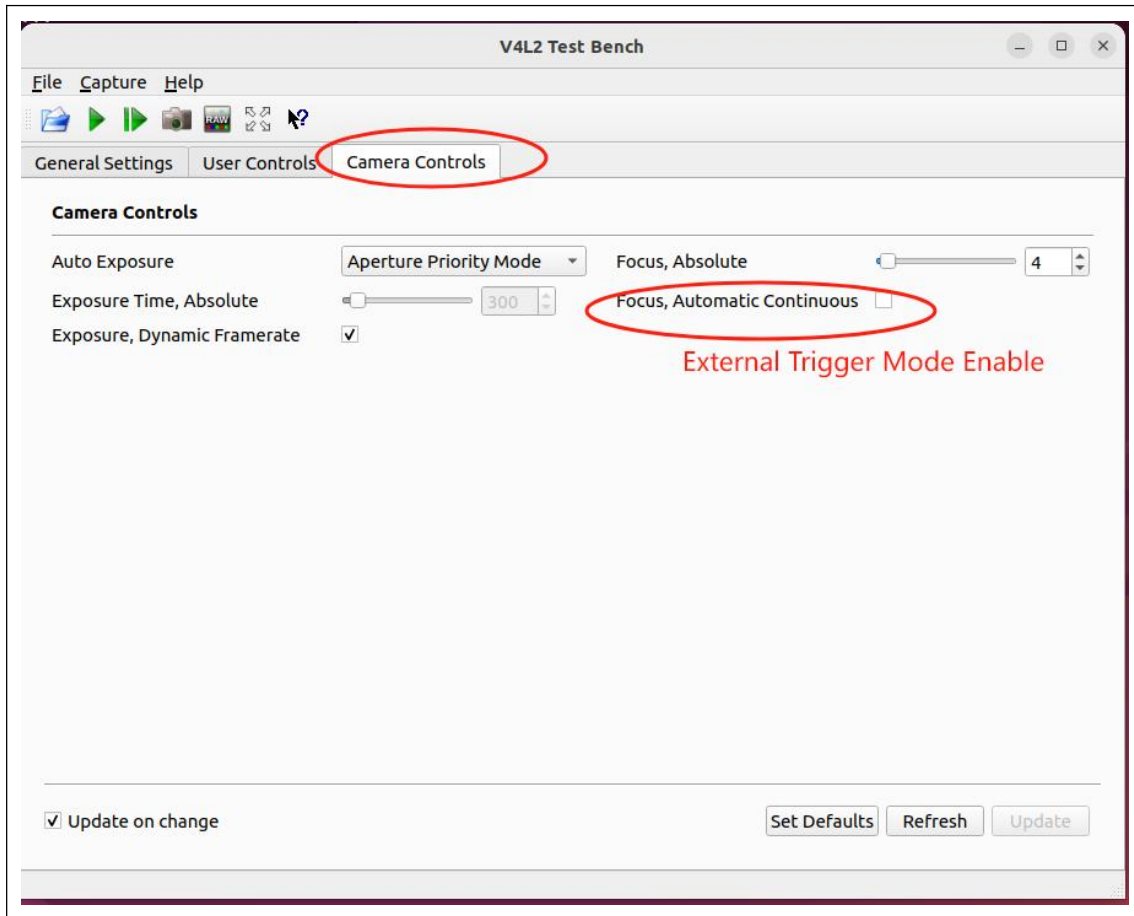

3.3 V4L utility Tools

3.3.1 Install V4L utility packages

```
sudo apt-get update  
sudo apt-get install v4l-utils
```

3.3.2 List UVC devices

```
v4l2-ctl --list-devices
```

```
joez@joez-VirtualBox:~$ v4l2-ctl --list-devices  
USB Camera: USB Camera (usb-0000:00:0c.0-2):  
    /dev/video0  
    /dev/video1  
    /dev/media0
```



3.3.3 List the supported formats

```
v4l2-ctl --list-formats -d
```

```
joez@joez-VirtualBox:~$ v4l2-ctl --list-formats -d 0
ioctl: VIDIOC_ENUM_FMT
Type: Video Capture

[0]: 'MJPG' (Motion-JPEG, compressed)
[1]: 'YUYV' (YUYV 4:2:2)
```

3.3.4 List resolutions and frame

```
v4l2-ctl --list-formats-ext -d 0
```

```
joez@joez-VirtualBox:~$ v4l2-ctl --list-formats-ext -d 0
ioctl: VIDIOC_ENUM_FMT
Type: Video Capture

[0]: 'MJPG' (Motion-JPEG, compressed)
    Size: Discrete 640x480
        Interval: Discrete 0.033s (30.000 fps)
        Interval: Discrete 0.033s (30.000 fps)
    Size: Discrete 800x600
        Interval: Discrete 0.033s (30.000 fps)
    Size: Discrete 1024x768
        Interval: Discrete 0.033s (30.000 fps)
    Size: Discrete 1280x720
        Interval: Discrete 0.033s (30.000 fps)
    Size: Discrete 1920x1080
        Interval: Discrete 0.033s (30.000 fps)
[1]: 'YUYV' (YUYV 4:2:2)
    Size: Discrete 1920x1080
        Interval: Discrete 0.200s (5.000 fps)
    Size: Discrete 640x480
        Interval: Discrete 0.033s (30.000 fps)
    Size: Discrete 800x600
        Interval: Discrete 0.050s (20.000 fps)
        Interval: Discrete 0.067s (15.000 fps)
        Interval: Discrete 0.100s (10.000 fps)
        Interval: Discrete 0.200s (5.000 fps)
    Size: Discrete 1024x768
        Interval: Discrete 0.200s (5.000 fps)
    Size: Discrete 1280x720
        Interval: Discrete 0.100s (10.000 fps)
        Interval: Discrete 0.200s (5.000 fps)
    Size: Discrete 1280x1024
        Interval: Discrete 0.200s (5.000 fps)
```

3.3.5 List Control parameters



```
v4l2-ctl -d /dev/video0 -list
```

```
joez@joez-VirtualBox:~$ v4l2-ctl -d /dev/video0 -list
Video input set to 0 (Input 1: Camera, ok)
User Controls
          brightness 0x00980900 (int)      : min=-64 ma
          contrast 0x00980901 (int)       : min=0 max=
          saturation 0x00980902 (int)      : min=0 max=
          hue 0x00980903 (int)            : min=-180 m
white_balance_automatic 0x0098090c (bool) : default=1
          gamma 0x00980910 (int)          : min=100 ma
          gain 0x00980913 (int)           : min=1 max=
power_line_frequency 0x00980918 (menu)   : min=0 max=
white_balance_temperature 0x0098091a (int) : min=2800 m
          sharpness 0x0098091b (int)      : min=0 max=
          backlight_compensation 0x0098091c (int) : min=0 max=
Camera Controls
          auto_exposure 0x009a0901 (menu)  : min=0 max=
          exposure_time_absolute 0x009a0902 (int) : min=50 max=
          exposure_dynamic_framerate 0x009a0903 (bool) : default=0
```

3.3.6 Set User/Camera controls

For example, set camera brightness to 64

```
v4l2-ctl -d /dev/video0 --set-ctrl=brightness=64
```

```
joez@joez-VirtualBox:~$ v4l2-ctl -d /dev/video0 --set-ctrl=brightness=64
```

3.4 OpenCV Python

3.4.1 Install Opencv-Python

Check python pip version



```
python3 --version
```

```
pip --version
```

Run below command if not find the pip.

```
joez@joez-VirtualBox:~$ pip --version
Command 'pip' not found, but can be installed with:
sudo apt install python3-pip
```

```
sudo apt install python3-pip
```

Install opencv-python

```
sudo pip install OpenCV-python
```

*** If you en count download errors**

```
sudo pip install opencv-python -i https://pypi.tuna.tsinghua.edu.cn/simple
```

3.4.2 Set user controls parameters.

Below code sample set brightness as 64, contrast as 0

```
import cv2

# open video0
cap = cv2.VideoCapture(0)

# The control range can be viewed through v4l2-ctl -L
cap.set(cv2.CAP_PROP_BRIGHTNESS, 64)
cap.set(cv2.CAP_PROP_CONTRAST, 0)

while(True):
    # Capture frame-by-frame
    ret, frame = cap.read()
    # Display the resulting frame
    cv2.imshow('frame', frame)
    if cv2.waitKey(1) & 0xFF == ord('q'):
        break

# When everything done, release the capture
cap.release()
cv2.destroyAllWindows()
```



SAVE File name as 1.py, then run

```
sudo python3 1.py
```

3.4.3 Controlling values through code

```
import cv2
import time
# open video0
cap = cv2.VideoCapture(0)
cap.grab()

cap.set(cv2.CAP_PROP_AUTOFOCUS, 1)
time.sleep(2)
cap.set(cv2.CAP_PROP_AUTOFOCUS, 0)
time.sleep(2)
cap.set(cv2.CAP_PROP_FOCUS, 123)

cap.set(cv2.CAP_PROP_FRAME_WIDTH, 640)
cap.set(cv2.CAP_PROP_FRAME_HEIGHT, 480)

while(True):
    # Capture frame-by-frame
    ret, frame = cap.read()
    # Display the resulting frame
    cv2.imshow('frame', frame)
    if cv2.waitKey(1) & 0xFF == ord('q'):
        break

# When everything done, release the capture
cap.release()
cv2.destroyAllWindows()
```

SAVE File name as 2.py, then run



```
sudo python3 2.py
```

3.4.4 Controlling values through UI interface

```
import cv2
import argparse
import configparser
from pathlib import Path
import time

parser = argparse.ArgumentParser()
parser.add_argument("-v", "--vid", default="0", help="Video source, default 0")
parser.add_argument(
    "-f", "--auto_focus", action="store_true", default=False, help="Turn on auto focus"
)
parser.add_argument(
    "-c",
    "--config",
    default="focus.ini",
    help="Focus config file, default focus.ini",
)
args = parser.parse_args()

try:
    vid = int(args.vid)
except ValueError:
    vid = args.vid

config_path = (Path(__file__).parent / Path(args.config)).resolve().absolute()
print("config file :", config_path)

config = configparser.ConfigParser()

config.read(config_path, encoding="utf-8")

cap = cv2.VideoCapture(vid)
cap.grab()
cap.set(cv2.CAP_PROP_AUTOFOCUS, 1)
```



```
if not args.auto_focus and config.has_section("Focus"):
    auto_focus = (
        config.getint("Focus", "auto_focus")
        if config.has_option("Focus", "auto_focus")
        else 1
    )
    focus = (
        config.getint("Focus", "focus")
        if config.has_option("Focus", "focus")
        else int(cap.get(cv2.CAP_PROP_FOCUS))
    )
else:
    auto_focus = 1
    focus = None
print("config auto_focus = %s" % auto_focus)
print("config focus = %s" % focus)
print("*" * 10)

if not auto_focus:
    cap.set(cv2.CAP_PROP_AUTOFOCUS, 0)

time.sleep(2)
if focus:
    cap.set(cv2.CAP_PROP_FOCUS, focus)

cv2.namedWindow("frame")

def set_auto_focus(x):
    cap.set(cv2.CAP_PROP_AUTOFOCUS, x)

cv2.createTrackbar(
    "0: OFF\r\n 1: ON\r\nauto_focus",
    "frame",
    int(cap.get(cv2.CAP_PROP_AUTOFOCUS)),
    1,
    set_auto_focus,
)
```



```
def set_focus(x):
    cap.set(cv2.CAP_PROP_FOCUS, x)

cv2.createTrackbar("focus", "frame", int(cap.get(cv2.CAP_PROP_FOCUS)), 1023, set_focus)

while cap.isOpened():
    # cap frame-by-frame
    ret, frame = cap.read()
    if not ret:
        break
    focus = int(cap.get(cv2.CAP_PROP_FOCUS))
    cv2.setTrackbarPos("focus", "frame", focus)

    af = int(cap.get(cv2.CAP_PROP_AUTOFOCUS))
    cv2.setTrackbarPos("0: OFF\r\n 1: ON\r\nauto_focus", "frame", af)

    cv2.imshow("frame", frame)

    if cv2.waitKey(1) & 0xFF == ord("q"):
        break

# When everything done, release the cap
cap.release()
cv2.destroyAllWindows()

if not config.has_section("Focus"):
    config.add_section("Focus")

print("set auto_focus = 0")
config.set("Focus", "auto_focus", "0")

print("set focus = %s" % focus)
config.set("Focus", "focus", str(focus))

config.write(open(config_path, "w"))
```

SAVE File name as cvtui.py, then run

```
sudo python3 cvtui.py
```



3.5 Gstreamer

GStreamer becomes a popular and powerful open-source multimedia framework to help users to build their own video streaming, playback, editing applications with various codec and functionalities on top of its high-level APIs.

3.5.1 Set Video Output Format

MJPEG

```
gst-launch-1.0 v4l2src device=/dev/video0 ! \
  image/jpeg,width=1920,height=1080,framerate=30/1 ! \
  decodebin ! autovideosink
```

```
joez@joez-VirtualBox:~/Desktop$ gst-launch-1.0 v4l2src device=/dev/video0 ! \
  image/jpeg,width=1920,height=1080,framerate=30/1 ! \
  decodebin ! autovideosink
```

YUV

```
gst-launch-1.0 -vv v4l2src device=/dev/video0 ! \
  video/x-raw,format=YUY2,width=1280,height=720,framerate=10/1 ! \
  videoconvert ! autovideosink
```

```
joez@joez-VirtualBox:~/Desktop$ gst-launch-1.0 -vv v4l2src device=/dev/video0 ! \
  video/x-raw,format=YUY2,width=1280,height=720,framerate=10/1 ! \
  videoconvert ! autovideosink
```

3.5.2 Streaming

MJPEG

```
# server
gst-launch-1.0 v4l2src device=/dev/video0 ! \
  image/jpeg,width=1280,height=720,framerate=30/1 ! \
  tcpserversink host=0.0.0.0 port=5001

# client
# change xxx.xxx.xxx.xxx to the actual ip address
```



UVC Camera SW Manual

```
gst-launch-1.0 -v tcpclientsrc host=xxx.xxx.xxx.xxx port=5001 ! \
  decodebin ! autovideosink
```

Save Video

```
gst-launch-1.0 v4l2src device=/dev/video0 !
image/jpeg,width=1280,height=720,framerate=30/1 ! jpegdec ! qtmux ! filesink
location=test.mp4 -e
```

Save Image

```
gst-launch-1.0 v4l2src device=/dev/video0 num-buffers=1 ! jpegenc ! filesink sync=false
location=file.jpg
```

Preview

```
gst-launch-1.0 v4l2src device=/dev/video0 !
image/jpeg,width=1280,height=720,framerate=30/1 ! jpegdec ! autovideosink
```

3.6 Read Serial Number

When you need to use multiple cameras, we need to use unique serial ID.

3.6.1 Linux udev

```
sudo udevadm info --query=all /dev/video0 | grep 'VENDOR_ID\|MODEL_ID\|SERIAL_SHORT'
```

```
joez@joez-VirtualBox: ~/Desktop$ sudo udevadm info --query=all /dev/video0 | grep
'VENDOR_ID\|MODEL_ID\|SERIAL_SHORT'
E: ID_VENDOR_ID=0bda
E: ID_MODEL_ID=3035
E: ID_SERIAL_SHORT=200901010001
```